


Barber Split Wedges

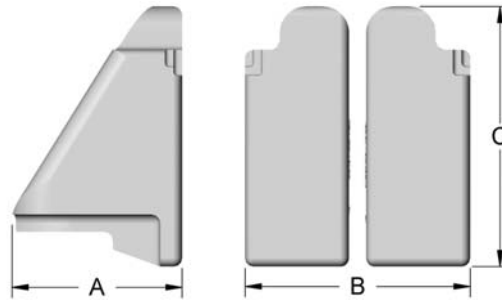

Truck Type	Split Wedge*	Bearing Size	Spring Travel	No. of Side Springs	A	B	C	Drawing Number
S-2-A	955-SW	6 x 11 6 1/2 x 12	D3	2	4 3/32	5 1/2	7 1/2	5995
S-2-B	925-SW	6 x 11 6 1/2 x 12	D4	2	3 3/4	5 1/2	6 3/4	5281
S-2-C	925-SW	6 x 11 6 1/2 x 12	D5	2	3 3/4	5 1/2	6 3/4	5281
S-2-D	905-SW	6 1/2 x 12	D5 D7	2	4 15/16	7	7 1/2	5903
S-2-HD S-2-HD-9C	915-SW	6 1/2 x 12 7 x 12	D5	2	4 7/8	6 1/2	7 1/2	5822
S-2-E	945-SW	6 x 11 6 1/2 x 12	D5	2	4 1/4	9 3/4	7 3/4	6023

* Bolster pocket must have square sidewalls and an insert must be installed in the pocket to use split wedge.

** All wedges listed for 6 1/2 x 12 bearings are fully compatible with 6 1/2 x 9 bearings.

Wedges are sold as shown above, or individual components can be purchased separately as shown below. It is recommended that the split wedge components be replaced in pairs.

Split Wedge Components			
Wedge	Right	Left	Insert
955-SW	955-SW-R	955-SW-L	5824 5286*
925-SW	925-SW-R	925-SW-L	5824 5286*
905-SW	905-SW-R	905-SW-L	5902
915-SW	915-SW-R	915-SW-L	5821
945-SW	945-SW-R	945-SW-L	6022



Right Half



Left Half



Insert

* Insert is used in "as cast" bolster pockets (pockets designed not to use pocket wear plates).

Always Use Original
Barber Parts



Wabtec, Standard Car Truck

6400 Shafer Court – Ste 450, Rosemont, Illinois 60018, U.S.A.
Telephone: 847-692-6050 Fax: 847-692-6299

Not A
Controlled
Document